
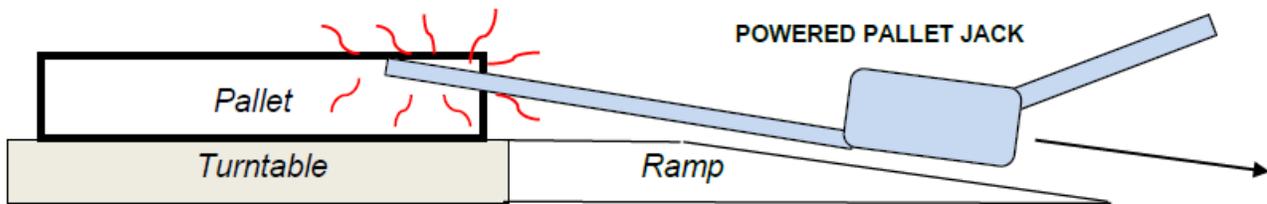



PORCH (RAMP EXTENSION)

When do you need a ramp extension known as a “porch”?

What is a “porch”? It is a section of flat (level) that extends the ramp and is positioned between the turntable and the ramp. The purpose is to make sure that the forks clear the pallet voids before the pallet jack starts down the ramp incline so that the forks do not get hung up in the pallet voids.

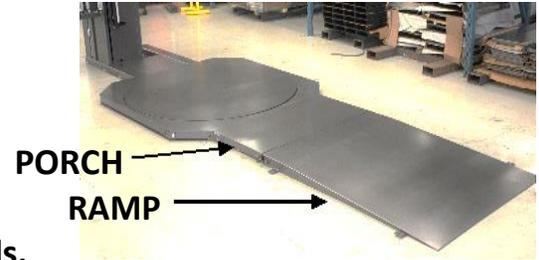


OPE1-S – 24”L x 48”W porch extension for powered pallet jacks

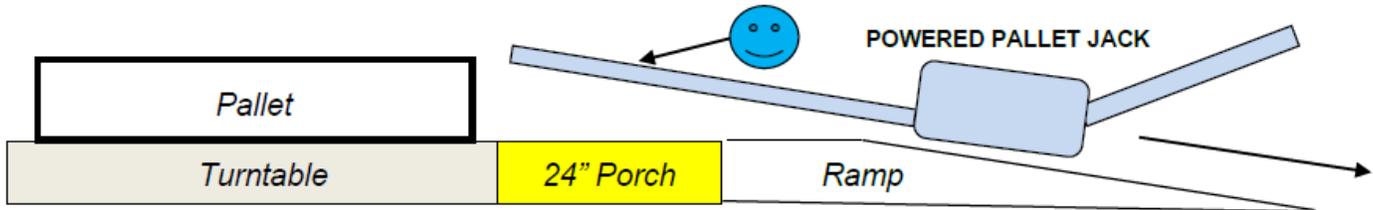

When do you need the optional porch? In most cases a porch is not necessary when using a standard manual pallet jack. It may be necessary when the machine is being loaded with a powered pallet jack, a “ride-um” or any other larger specialized material handling equipment.

How do I determine the size of the porch? The chart below is to help you determine what size porch is needed. REMEMBER, because there is such a wide variety of material handling equipment available, this chart does not guarantee the result. Other factors involved are the size/construction/condition of the pallet and where it is placed on the turntable.

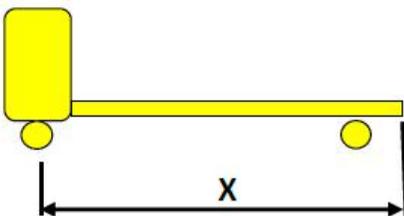

	PORCH SIZE	PART NUMBER
57” or less	None required	
57” to 81”	24” L x 48” W	OPE1-S
81” to 97”	40” L x 48” W	OPE2-S
Over 97”	Over 40” Long	Factory Quote